

Datasheet


Bicycle stands Pireo Display 5 seats

Product code 308-D

Rev. 0 of 10/06/2016



1/5

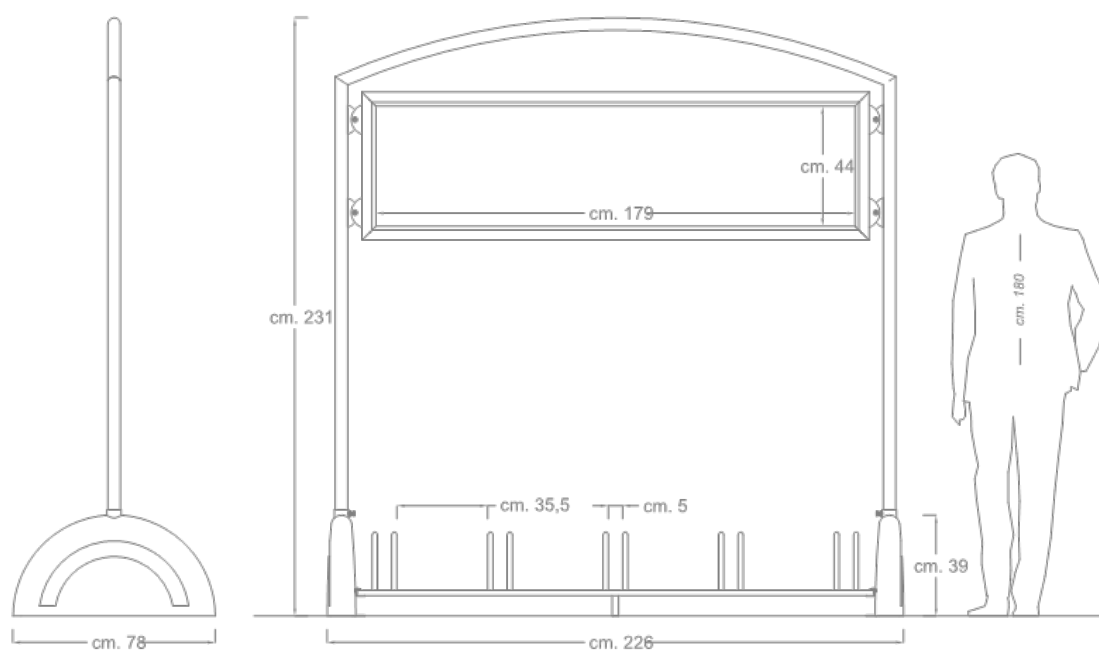

Dimcar reserves the right to make, at any time, changes on the products deemed useful to improve the quality of the same; the images contained in the sheets may not faithfully reproduce the real colors of the items.

Datasheet

Bicycle stands Pireo Display 5 seats

Product code 308-D

Rev. 0 of 10/06/2016



DESCRIPTION

Structure

5-seater Pireo bike rack with display composed of 2 supports in white stone-effect concrete: each individual support is equipped with a compass in galvanized steel round tube Ø mm. 55x2 inside which allows the insertion and locking of the table-holder frame. No. 2 horizontal connecting crosspieces in galvanized steel rectangular tube 50x20x1.5 mm complete with support feet. No. 5 arch-shaped bike-holder brackets in galvanized steel tube with oval section 40x20x1.5 mm.

- Double-sided table composed of table-holder frame and upper arch in galvanized steel round tube Ø mm. 48x2; the frame is equipped with No. 4 plates for connecting the table. Perimeter frame made of galvanized steel box thickness mm. 1.2.
- 1.2 mm thick galvanized sheet metal billboard panel applied inside the boxed profile; 4 galvanized sheet metal connection plates welded on the short sides of the perimeter frame.

Total weight: 160Kg

Datasheet

Bicycle stands Pireo Display 5 seats

Product code 308-D

Rev. 0 of 10/06/2016



COLOR FINISH AS PROVIDED IN THE CATALOG



Gunmetal gray
(Steel parts)

Customers can request a different finish from the RAL color options available on our website.

PRODUCT OPTIONALS

Product code 308-D-AD -

PRODUCT VARIANTS



Product code 308 - Bicycle Stands Pireo 5 seats



Product code 308-BIS - Bicycle Stands Pireo 9 seats



Product code 308-BIS-D - Bicycle Stands Pireo Display 9 seats

Datasheet

Bicycle stands Pireo Display 5 seats

Product code 308-D

Rev. 0 of 10/06/2016



ANTICORROSIVE TREATMENTS AND FINISHES

Washing

Spray treatment for removing oil and grease from metal surfaces using special degreasing liquids. Subsequent drying in dryer for 15 minutes.

Sandblasting

Manual sandblasting process with river sand, which increases the porosity of metal surfaces and thus the adhesion of thermosetting powders.

Anti-corrosive application

First painting cycle with an anticorrosive thermosetting powder primer based on epoxy resins and special pigments. It provides adequate protection against weathering.

Anticorrosive polymerization

Baking in an industrial curing oven at a temperature of 180°C. During this stage, the powder turns into a uniform, smooth and durable coating.

Colored finish application

Final coating cycle with thermosetting powders. Application follows the same principles as the anticorrosive.

Polymerization colored finish

Final baking in an industrial curing oven at a temperature of 180°C. The procedure follows the same principles as the curing of the anticorrosive. The powder is transformed into a uniform coating, and the surface appearance takes on the characteristics of the chosen color type, e.g. smooth, textured, wrinkled, etc.

4/5

Dimcar reserves the right to make, at any time, changes on the products deemed useful to improve the quality of the same; the images contained in the sheets may not faithfully reproduce the real colors of the items.

Datasheet

Bicycle stands Pireo Display 5 seats

Product code 308-D

Rev. 0 of 10/06/2016



DELIVERY

Product supplied in assembly kit with steel hardware and instructions for mounting and grounding.

FIXING

The product is prepared for fixing to the ground using anchor bolts and expansion plugs.

CORPORATE CERTIFICATIONS

ISO 9001:2015

Quality management system.

UNI EN ISO 3834-3:2021

Welding quality management system.

Processing center

Certificate of Processing Center