
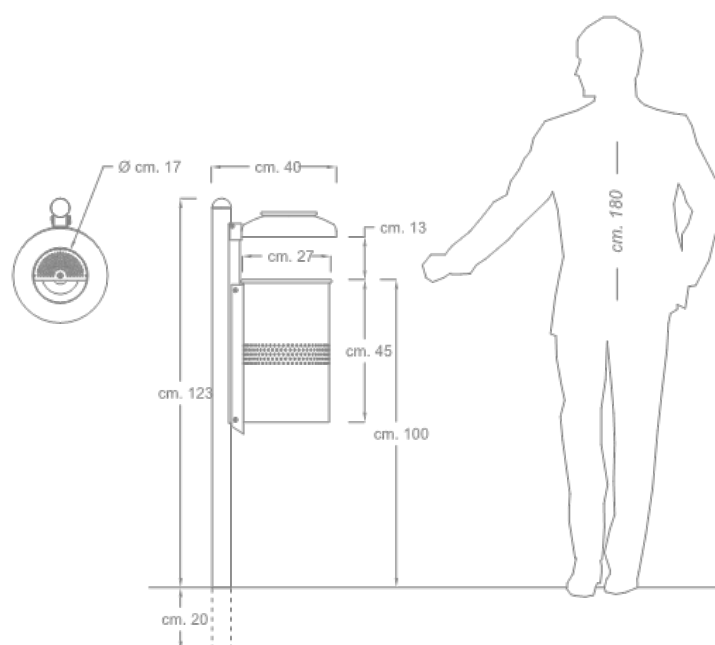


Datasheet

ecoBIO basket with lid and ashtray

Product code 389

Rev. 1 of 10/01/2017

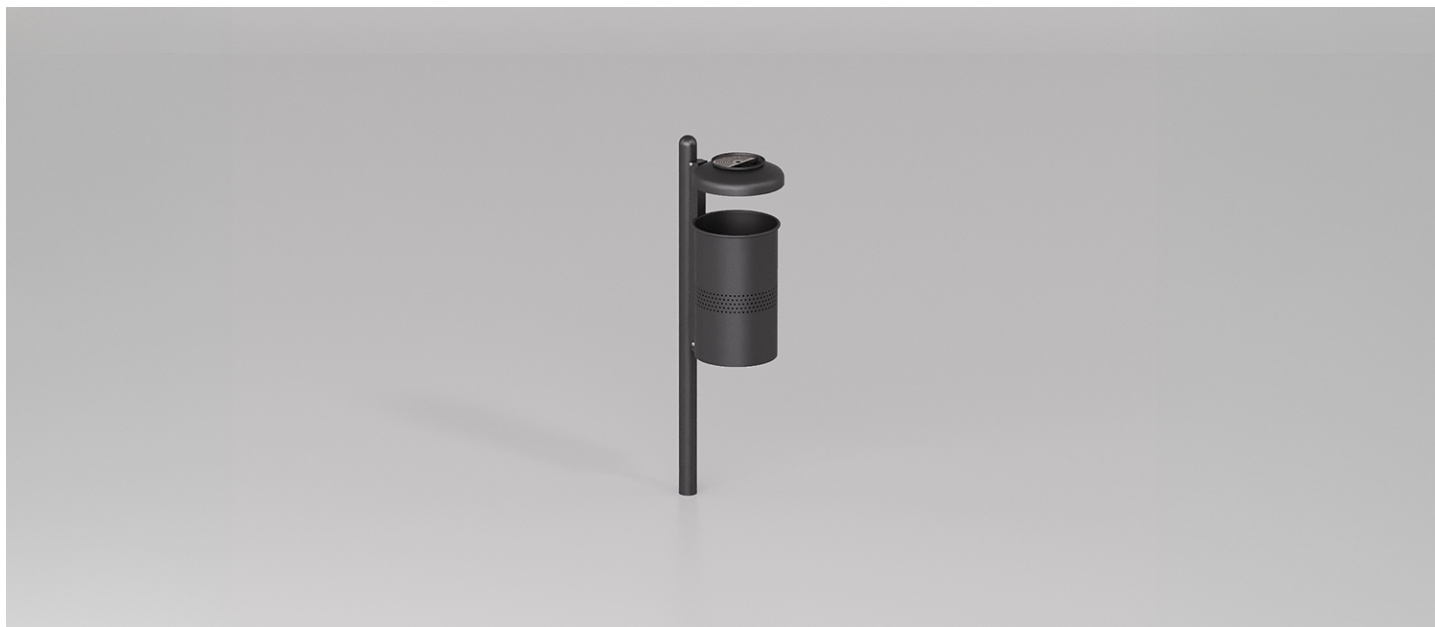

Datasheet

ecoBIO basket with lid and ashtray

Product code 389

Rev. 1 of 10/01/2017



DESCRIPTION

Structure

The EcoBio bin is made up of a support upright in round tubular galvanized steel Ø mm. 60x2 complete with PVC end cap with spherical head. Shaped lid, foldable type, made of galvanized sheet metal, thickness mm. 3. Folding the lid makes it easier to remove any internal bags. Circular ashtray (removable), incorporated into the center of the lid, complete with a micro-perforated plate for extinguishing cigarettes; the semi-circular plate is made of polished AISI 304 stainless steel sheet, thickness mm.

- Cylindrical basket made of galvanized sheet metal, thickness mm. 1 with a central area characterized by punching of alternating circular holes of Ø mm. 6; upper part with anti-cut edge; bottom in galvanized sheet metal with holes for draining rainwater.

Overall weight: 11Kg

Datasheet

ecoBIO basket with lid and ashtray

Product code 389

Rev. 1 of 10/01/2017



FINISH ACCORDING TO THE CATALOGUE



Gun metal gray
(Steel components)

Customers can request a different finish from the RAL color options available on our website.

Datasheet

ecoBIO basket with lid and ashtray

Product code 389

Rev. 1 of 10/01/2017



TREATMENTS AND FINISHES THAT PREVENT CORROSION

Washing

Spray treatment is used to get rid of oils and fats from metal surfaces by using special degreasing liquids. The process involves drying in a dryer for 15 minutes.

Sandblasting

The porosity of metal surfaces is increased by the manual sandblasting process with river sand, which results in an increase in thermosetting powder adhesion.

Anticorrosive application

The first step in the coating process involves using a thermosetting powder anti-corrosion base made of epoxy resins and specific pigments. It provides enough protection against the elements.

Anticorrosive polymerization

The process involves cooking in an industrial curing oven at 180°C. In this step, the powder is transformed into a coating that is uniform, smooth, and lasting.

Polymerization coloured finish

The final phase of coating with thermosetting powders. The application complies with the same principles as the anti-corrosion.

Polymerization colored finish

The final product will be cured in an industrial curing oven at a temperature of 180°C. The procedure is based on the same principles as the polymerization of the anti-corrosion agent. The powder becomes a uniform coating, and the surface becomes the characteristics of the chosen color type, including smooth, peeled, or wrinkled, etc.

2/5

Dimcar si riserva di apportare, in qualsiasi momento, modifiche sui prodotti ritenute utili al miglioramento qualitativo degli stessi; le immagini contenute nelle schede potrebbero non riprodurre fedelmente i colori reali degli articoli.

Datasheet

ecoBIO basket with lid and ashtray

Product code 389

Rev. 1 of 10/01/2017



DELIVERY

Prodotto fornito in kit di assemblaggio con viteria in acciaio ed istruzioni per il montaggio e fissaggio.

FIXING

Il prodotto deve essere installato mediante cementazione.

CORPORATE CERTIFICATES

ISO 9001:2015

Quality Management System.

UNI EN ISO 3834-3:2021

Welding quality management system.

Processing center

Certificate according to Italian Law D.M. of 17 Jan 2018